





# Hints from the Model Garage


APPLY RUBBER LUBRICANT BETWEEN METAL AND RUBBER

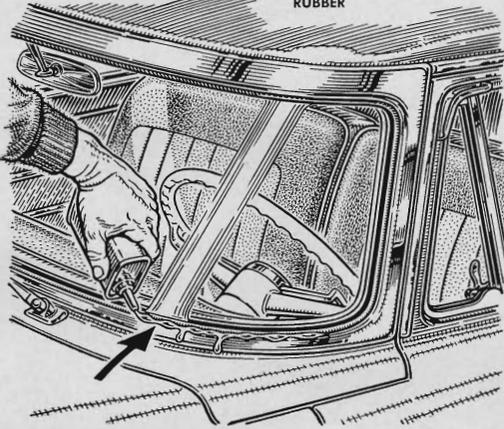

To stop an annoying squeak caused by vibration of the windshield in its opening, trickle silicone rubber lubricant between the metal molding and the rubber channel. If this doesn't silence it, force sealing compound between rubber and glass.

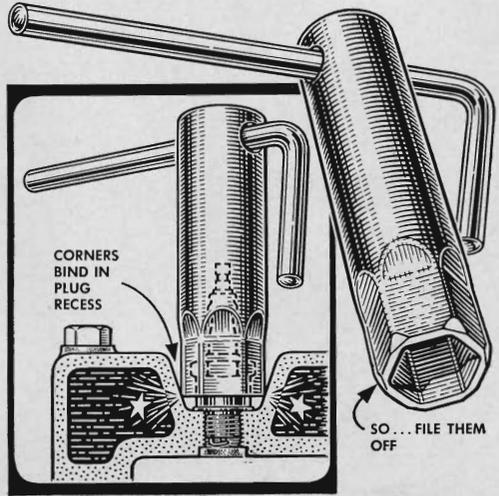

A spark-plug wrench will work easier if you file off the sharp outside corners. This small effort will prevent the six-sided wrench from binding or digging into the plug-recess sides as you exert pressure to loosen or tighten the plug.

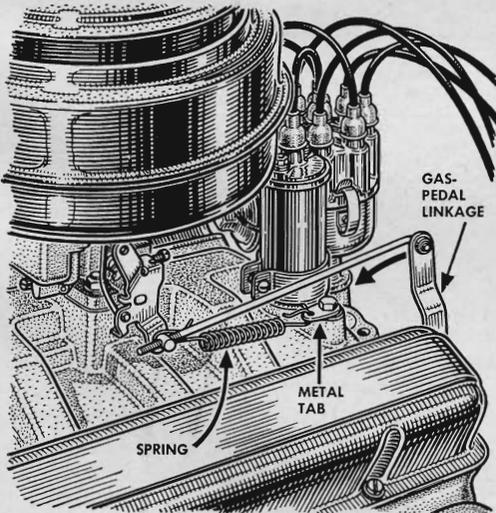

**Erratic idling**—fast one time, slow the next—can often be corrected by adding a 10-cent spring to the throttle linkage. Stretch the spring far enough to insure positive throttle return, and secure it to a metal tab held by a head bolt.



If a nut or bolt drops into an out-of-reach place, retrieve it with a magnetized screwdriver. Wrap the tool with insulated wire and briefly touch the ends to the battery. Then tie the wire to the handle and lower it to pick up the part.