





Air leaks at the rim seal of tubeless tires can be detected without immersing the wheel in a tank of water. Just lay the wheel flat, pour water around the rim, and watch for bubbles. Repeat the test on the other side of the wheel.

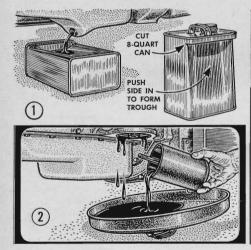

Tips on draining oil: (1) Slit an eightquart can near the top and press the side in. Oil will run down the trough and into the can, where it is retained when the can is picked up. (2) Use the lid from a garbage can to catch scat-

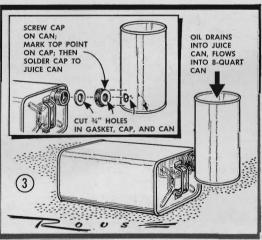

tered drips when removing the oil filter. (3) Solder a quart juice can to the cap of an eight-quart can and join them. The tall juice can will catch oil as it mans out of the crankcase. The oil will flow through the cap's hole to the large can.