





Removing a window channel to replace the glass is often a tough job, especially if rust has formed on the metal. To save time and temper, apply heat to the bottom side of the channel with a torch.

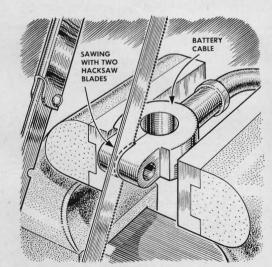

If the hole of a battery clamp is too big to fit snugly on the post, remove the cable from the car, clamp the terminal in a vise, and hacksaw along the lips with two blades. This removes enough metal to fit the clamp to the post.

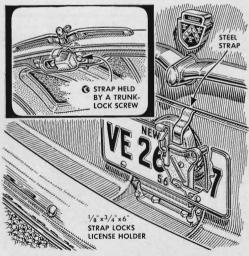

A rear trunk key also serves as a gas-cap key in this setup for a car that has the filler pipe hidden behind a tilt-down license plate. A steel strap projecting from the deck lid prevents access to the gas cap until the lid is lifted.